

# AU40M Controller Instructions

To get into the Settings on Controller, you need to change to "Mulx" mode.

Press [MENU] and select Mulx using the joystick.

1. Getting into Settings:

[FUNC] + [ ]

2. input the default password: 1111

use 1 + [CAM] to input numbers.

3. To Move UP or DOWN:

UP [FUNC] + [ ] / [ ]

DOWN [FUNC] + [ ] / [ ]

4. Changing Values:

press [FUNC] + [ON/LIVE] or [OFF/TAPE].