

IRIS

PEAK → OFF

ON A-----P

ALC AUTO _____

FIX _____

AEC AUTO _____

FIX _____

BLC

→ OFF

ON

→ AREA

SENS LOW-----HIGH

AGC SENS

FREEZE → FIELD
FRAME

FREEZE → OFF
ON

PRIORITY → AGC
SENS

AGC AUTO _____

SENS AUTO _____

COLOR

COLOR → OFF
ON
→ AUTO

WB

→ ATW R _____ B

AWB R _____ B

GAIN

→ R-Y _____

B-Y _____

APC

→ H. GAIN _____

V. GAIN _____

LENS

→ DIGITAL X2

ZOOM SPEED _____

FOCUS SPEED _____

ZOOM WIDE TELE

FOCUS

→ MANUAL INF NEAR

AUTO

REV

POSI / NEGA

H.REV → OFF

ON

V.REV → OFF

ON

POSITION

ALARM NO=0

FREEZE OFF

ON

POSITION

NO=1

ZOOM SPEED _____

FOCUS SPEED _____

ZOOM WIDE TELE

FOCUS INF NEAR

ID

TITLE

→ ABCDEFGHIJKLMS

01234567890

QWERTYUIOPLAKS

JDHFGZVXBCNM

=-][\V.,

UP

DOWN

PRESET

→ OFF

ON

INITIAL

OFF

→ ON

PHASE

→ OFF

ON

- _____ +

MARK

→ OFF

ON

GAMMA

→ TYPE A

TYPE B

POWER ON

→ BLUE BACK
OFF
→ ON
POSITION
→ OFF
ON NO=1

LANGUAGE

→ ENGLISH
CHINESE
JAPANESE

COMM.ID

MODE → 1:1
1:N

MOTION

→ OFF
ON
→ AREA
TIME 10SEC
→ 30SEC
60SEC

SENS LOW ————— ■ ————— HIGH

MASK

→ POSITION NO=1
MASK NO=1
→ OFF
ON → H-START = 41
H-END = 73
H-START = 27
H-END = 59
CONNECT → OFF
ON

OSD

POSITION → OFF
ON

MOTION → OFF
ON

ZOOM MAG → OFF
ON

ZOOM + AF

ZOOM + AF → OFF
ON

AF SLEEP → OFF
ON

- 1- Call Preset 57 to get into the OSD Menu / and also used to confirm any changes on the value of any setting / or getting into sub menus
- 2- Use (Close IRIS) to move down.
- 3- Use (Open IRIS) to Move UP.
- 4- Set Preset 57 to get out from the Menu / and sub menus.
- 5- The Open and Close IRIS are also used to decrease or increase the value on each option (l.e. Zoom speed).

For CD55 Series:

Use Call Preset 63 and Set Preset 63 as above.

use Wide / Tele to move up and down through the menu