

**IRIS**

PEAK → OFF

ON A-----P

ALC AUTO —————

FIX —————

AEC AUTO —————

FIX —————

**BLC**

→ OFF

ON

→ AREA

SENS LOW-----HIGH

**AGC SENS**

FREEZE → FIELD  
FRAME

FREEZE → OFF  
ON

PRIORITY → AGC  
SENS

AGC AUTO —————

SENS AUTO —————

**COLOR**

COLOR → OFF  
ON  
→ AUTO

**WB**

→ ATW R ————— B

AWB R ————— B

**GAIN**

→ R-Y —————

B-Y —————

**APC**

→ H. GAIN —————

V. GAIN —————

**LENS**

→ DIGITAL X2

ZOOM SPEED —————

FOCUS SPEED —————

ZOOM WIDE TELE

FOCUS

→ MANUAL INF NEAR

AUTO

**REV**

POSI / NEGA

H.REV → OFF

ON

V.REV → OFF

ON

**POSITION**

ALARM NO=0

FREEZE OFF

ON

POSITION

NO=1

ZOOM SPEED —————

FOCUS SPEED —————

ZOOM WIDE TELE  
FOCUS INF NEAR

**ID**

TITLE

→ ABCDEFGHIJKLMS  
01234567890  
QWERTYUIOPLAKS  
JDHFGZVXBCNM  
=][\V.,

UP

DOWN

**PRESET**

→ OFF

ON

INITIAL

OFF

→ ON

PHASE

→ OFF

ON

- ————— +

**MARK**

→ OFF

ON

**GAMMA**

→ TYPE A

TYPE B

**POWER ON**

- BLUE BACK OFF
- ON POSITION
- OFF ON NO=1

**LANGUAGE**

- ENGLISH
- CHINESE
- JAPANESE

**COMM.ID**

- MODE → 1:1
- 1:N

**MOTION**

- OFF ON
- AREA TIME 10SEC
- 30SEC
- 60SEC



**MASK**

- POSITION NO=1
- MASK NO=1
- OFF
- ON → H-START = 41
- H-END = 73
- H-START = 27
- H-END = 59
- CONNECT → OFF
- ON

**OSD**

- POSITION → OFF
- ON
- MOTION → OFF
- ON
- ZOOM MAG → OFF
- ON

**ZOOM + AF**

- ZOOM + AF → OFF
- ON
- AF SLEEP → OFF
- ON

- 1- Call Preset 57 to get into the OSD Menu / and also used to confirm any changes on the value of any setting / or getting into sub menus
- 2- Use (Close IRIS) to move down.
- 3- Use (Open IRIS) to Move UP.
- 4- Set Preset 57 to get out from the Menu / and sub menus.
- 5- The Open and Close IRIS are also used to decrease or increase the value on each option (l.e. Zoom speed).

For CD55 Series:

Use Call Preset 63 and Set Preset 63 as above.

use Wide / Tele to move up and down through the menu