

AU40E

Select the Camera:	1 to 64	[N] + [CAM]
Set Preset Position:	1 to 64	[N] + [PRESET]
Call Preset Position:	1 to 64	[N] + [CALL]
Erase Preset Position:	1 to 64	[N] + [CLEAR]
Run Pattern:	1 to 6	[N] + [SHOT]
Auto Pan Function:	Available only for NEON / SAMSUNG P1 - preset (from 1 to 64) - Start Position P2 - preset (from 1 to 64) - End Position	[AUTO] + P1 + [ON] + [P2] + [OFF]
360 degrees Scan:	to 360 degree pan scan	[AUTO] + P1 + [ON] + [P1] + [OFF]
Auto Pan Function 2:	Set the Start Position Set the End Position	[AUTO] + [ON] [AUTO] + [OFF]
Run Auto Pan:		[AUTO] + [SHOT]
Camera Power ON/OFF:	ON/OFF switching	[MENU] + 0 + [ON]
Camera Reset:		[MENU] + 0 + [OFF]
Back Light Compensation:	ON	[MENU] + 1 + [ON]
Back Light Compensation:	OFF	[MENU] + 1 + [OFF]
Zero Illumination:	ON	[MENU] + 2 + [ON]
Zero Illumination:	OFF	[MENU] + 2 + [OFF]
Menu / Display	ON	[MENU] + 3 + [ON]
Menu / Display	OFF	[MENU] + 3 + [OFF]
Digital Zoom	ON	[MENU] + 4 + [ON]
Digital Zoom	OFF	[MENU] + 4 + [OFF]
Focus	Automatic	[MENU] + 6 + [ON]
Focus	Manual	[MENU] + 6 + [OFF]
Iris	Automatic	[MENU] + 7 + [ON]
Iris	Manual	[MENU] + 7 + [OFF]
White Balance Mode	Automatic	[MENU] + 8 + [ON]
White Balance Mode	Manual	[MENU] + 8 + [OFF]
White Balance Mode	Indoor Mode	[MENU] + 9 + [ON]
White Balance Mode	Outdoor Mode	[MENU] + 9 + [OFF]
White Balance Mode	ATW Mode	[MENU] + 10 + [ON]
White Balance Mode	One push Mode	[MENU] + 10 + [OFF]
Black and White / Color	Color	[MENU] + 11 + [ON]
Black and White / Color	B&W	[MENU] + 11 + [OFF]

Auto Pan Set	< 180 Low Speed	[MENU] + 12 + [ON]
Auto Pan Set	> 180 Low Speed	[MENU] + 12 + [OFF]
Auto Pan Set	< 180 Middle Speed	[MENU] + 13 + [ON]
Auto Pan Set	> 180 Middle Speed	[MENU] + 13 + [OFF]
Auto Pan Set	< 180 High Speed	[MENU] + 14 + [ON]
Auto Pan Set	> 180 High Speed	[MENU] + 14 + [OFF]
Auto Pan Start	Start Recording	[MENU] + 17 + [ON]
Auto Pan End	Start Recording	[MENU] + 17 + [OFF]
Run Auto Pan	Run	[MENU] + 18 + [ON]