

## CD55NV



FOCUS



NEAR FOCUS



 
FAR FOCUS



BACKLIGHT COMPENSATION



INDOOR MODE WHITE BALANCE



OUTDOOR MODE WHITE BALANCE



TOUCH MODE WHITE BALANCE



ZOOM CONTROL



ZERO ILLUMINANCE

### MAIN MENU

1. DISPLAY SETUP
2. CAMERA SETUP
3. CONTROL SETUP
4. CAMERA MASK SET
5. PROGRAM
6. PAL CAMERA
7. CAM DEFAULT SET
8. DOME RESET
9. EXIT

CALL 64 TO GET INTO THE MAIN MENU

PAL / NTSC

DISPLAY SETUP	
1. ID DISPLAY	ON
2. ID POS	TOP-L
3. TITLE DIS	ON
4. TITLE POS	01 LINE
5. CAM DISPLAY	ON
6. RETURN	

TOP-R/BOTT-L/BOTT-R  
1 TO 10

CAMERA SETUP	
1. SLOWSHUTTER	AUTO
2. BACK LIGHT	OFF
3. ICR SHOT	AUTO
4. IRIS	AUTO
5. D-ZOOM	ON
6. FOCUS	AUTO
7. WB SET	ATW
8. MENU OF CAM	
9. RETURN	

AUTO / MANUAL  
ON / OFF  
ON / AUTO  
AUTO / MANUAL  
ON / OFF  
AUTO / MANUAL  
ATW / INDOOR / OUTDOOR / ONEPUSH / AUTO / MANUAL

CONTROL SETUP	
1. AUTO FILP	ON
2. ALARM	ON
3. PRESET PIC	MOVE
4. HOME OPTION	
5. RETURN	

ON / OFF  
ON / OFF

HOME OPTION	
1. AUTO HOME	ON
2. HOME POS	1
3. DWELL TIME	05 MIN
5. RETURN	

ON / OFF  
1 TO 63 / 65 TO 128  
1 TO 99

CAMERA MASK SET	
1. MASK PRIVACY	OFF
2. MASK SHADE	BLACK
3. MASK REGION	1
4. RETURN	

ON / OFF

PROGRAM	
1. AUTO PAN START POSITION	
2. AUTO PAN END POSITION	
3. RUN AUTO PAN	SLOW
4. SET TITLE	1
5. SET PATROL	1
6. RUN PATROL	1
7. RECORD PATTERN	
8. RUN PATTERN	
9. RETURN	

FAST / NORMAL / SLOW / -FAST / -NORMAL / -SLOW  
USE OPEN IRIS / CLOSE IRIS TO GET IN AND GET OUT OF MENU  
40 SEC. TO RECORD PATTERN

NO	POS	SP	TM	POS	SP	TM
01	001	01	01	002	01	01
03	003	01	01	004	01	01
05	---	---	---	---	---	---
07	---	---	---	---	---	---
09	---	---	---	---	---	---
11	---	---	---	---	---	---
13	---	---	---	---	---	---
15	---	---	---	---	---	---
SEQ : 01				CLOSE:EXIT		