

Main Menu (use the zoom in and zoom out commands to move the arrow up and down,
and the far focus and near focus to select the option)

CAMERA ID OFF
FOCUS SET ↴
AWB SET ↴
AE SET ↴
SPECIAL SET ↴
MOTION DET ↴
F OSD DISP ↴
E SENSITIVE NOT USE
WDR SET NOT USE
EXIT ↴

FOCUS SET

FOCUS MODE AUTO/PUSH AUTO/MANUAL
FOCUS DIST 1CM-5M
ZOOM START 1X-26X
ZOOM END 270X
ZOOM SPEED QUICK/MIDDLE/SLOW
ZTRK MODE AUTO ONLY
INITIAL SET
RETURN ↴

AWB SET

WBC MODE AUTO/PUSH AUTO/MANUAL/OUTDOOR/INDOOR/SPECIAL
RED ADJUST
BLUE ADJUST
PUSH AUTO
INITIAL SET
RETURN

AE SET

AE MODE AUTO/MANUAL/AGCMANUAL/IRSMANUAL
IRIS ADJUST AUTO/112/AUTO/112
AGC ADJUST AUTO/1/1/AUTO
BRIGHTNESS 42/NOT USE/42/42
BACKLIGHT OFF/NOT USE/OFF/OFF
BLC LEVEL 32/NOT USE/32/32
FLICKERNESS OFF/OFF/OFF/OFF
SHUTTER NORMAL/NORMAL/NORMAL/NORMAL
INITIAL SET OFF/OFF/OFF/OFF
RETURN ↴

SPECIAL SET

USER TITLE
SHARPNESS 10
MIRROR OFF
COLOR ON
NEGATIVE OFF
WIDE BURST OFF
INITIAL SET ON
RETURN ↴

MOTION

DETECTION ON/OFF
LEVEL SET 10
INITIAL SET OFF
RETURN ↴

F OSD DISP

FUNCTION DISP OFF
MOTION DET DISP OFF
CAMERA ID DISP OFF
ZOOM MAG DISP OFF
USER TITLE DISP ON
INIT TITLE DISP ON
INIT SET ON
RETURN ↴