


MP41 SERIAL SETUP :

FOR CONNECTION BETWEEN MP41 AND ADDRESS BOX

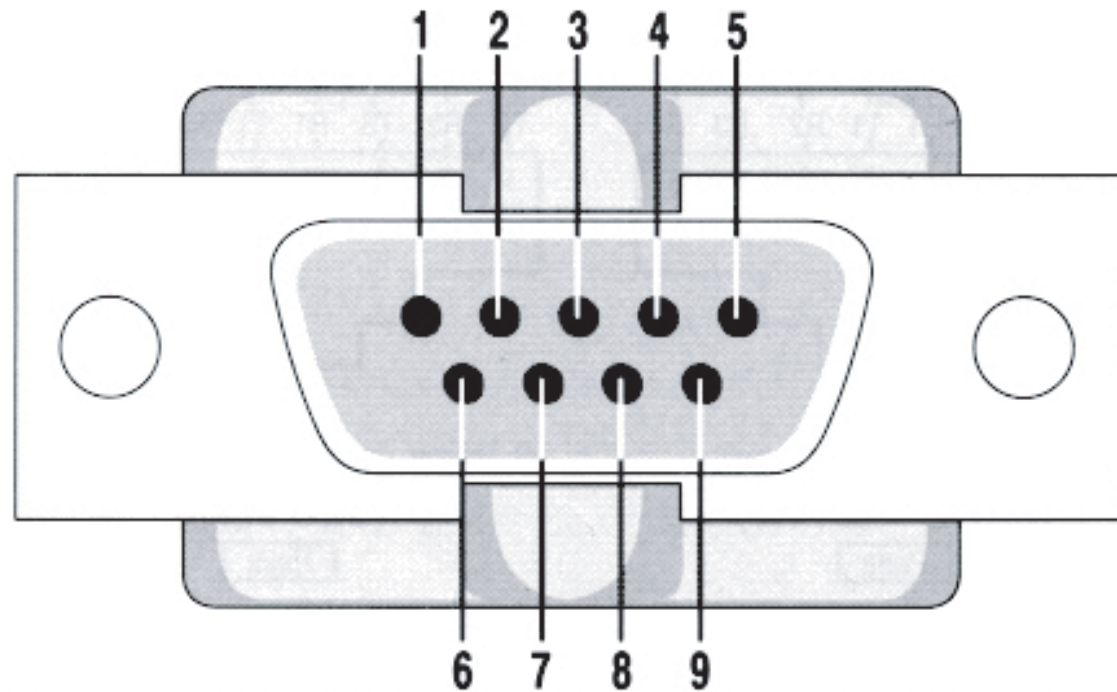

Pin	Signal	Pin	Signal
1		6	
2		7	
3		8	TXD Signal
4		9	
5	Signal Ground		