


## CZ65 protocol settings:


To control the Iris, the camera has to be set on AE Manual Mode.

See below the list of compatible protocols, and the Dip switch settings.

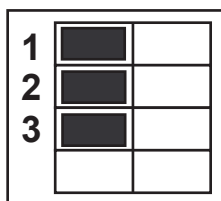


OFF ON

PELCO-D  
2400BPS

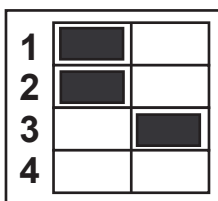


OFF ON

PELCO-P  
4800BPS

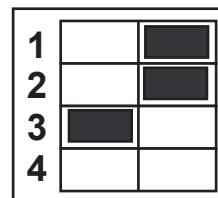


OFF ON

HD600  
9600BPS

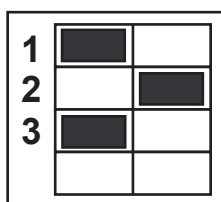


OFF ON

PELCO-P  
9600BPS

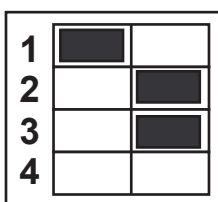


OFF ON

VIDOB01  
9600BPS

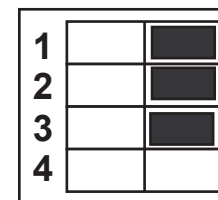


OFF ON

HTSCAM  
9600BPS

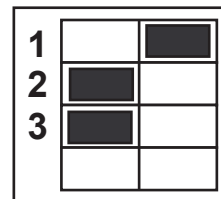

OFF ON

LILIN  
9600BPS

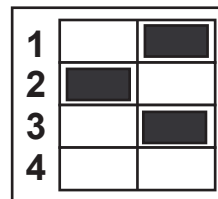

OFF ON

ALEC  
4800BPS

To change the settings in the camera, use the camera rear buttons.  
Reset the power on the camera to save the new settings.